

FOLD

PLEASE NOTE: THE ZAGGkeys PRO/PROplus IS MADE FROM AIRCRAFT ALUMINUM WITH A HIGH-GRADE FINISH SIMILAR TO THE FINISH ON MANY POPULAR DEVICES.

FOR UNPARALLELED SCRATCH PROTECTION, WE RECOMMEND ZAGG'S invisibleSHIELD® OR ZAGGskins™.



©2005 - 2012 ZAGG Inc. All Rights Reserved.
PATENT PENDING | NASDAQ: ZAGG | MADE IN CHINA
iPad® and Apple® are registered trademarks of Apple, Inc.

ZAGG, invisibleSHIELD, invisibleSHIELD with design, and ZAGGkeys PRO/PROplus, are trademarks or registered trademarks of ZAGG Inc.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
1: This device may not cause harmful interference, and
2: This device must accept any interference received, including interference that may cause undesired operation



NEED MORE HELP? PLEASE SEE OUR FAQ SECTION AT:
www.ZAGG.com/faq


WARRANTY REGISTRATION

YOUR ZAGGkeys™ PRO™/PROplus™ COMES WITH A 1 YEAR MANUFACTURER'S WARRANTY. YOU MUST REGISTER YOUR ZAGGkeys PRO/PROplus™ AND KEEP YOUR RECEIPT OF PURCHASE TO ACTIVATE THE WARRANTY. IF YOU PURCHASED ON ZAGG.COM, ZAGG HAS ALREADY REGISTERED YOUR ZAGGkeys PRO/PROplus AND HAS YOUR PROOF OF PURCHASE.

SEPARATING

YOUR ZAGGkeys PRO/PROplus ATTACHES TO THE APPLE® IPAD® USING MAGNETS AT THE TOP AND BOTTOM OF BOTH DEVICES.

1. TO SEPARATE, SET ON STABLE SURFACE AND GRASP BOTH DEVICES FIRMLY USING THE GROOVE AT THE TOP OF THE ZAGGkeys PRO/PROplus, AND CAREFULLY PULL APART. THEN, AN ADDITIONAL PULL WILL DETACH THE BOTTOM MAGNETS.

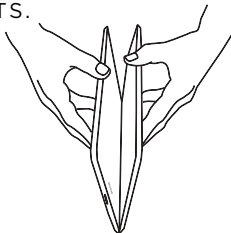

TO UPDATE YOUR IPAD® SOFTWARE, FOLLOW THESE STEPS:

- A. PLUG YOUR IPAD® INTO YOUR COMPUTER
- B. OPEN iTunes
- C. SELECT YOUR IPAD® IN THE LEFT HAND COLUMN
- D. CHOOSE THE BUTTON IN THE MIDDLE OF THE SCREEN TO CHECK FOR SOFTWARE UPDATE
- E. IF AN UPDATE IS AVAILABLE, PLEASE INSTALL IT. THIS WILL TAKE A FEW MINUTES TO DOWNLOAD FROM APPLE®
- F. AFTER INSTALLATION IS COMPLETE, RESTART YOUR IPAD® AND TROUBLESHOOTING LIST

*** IF YOU RECEIVE THE SAME ERROR MESSAGE DURING PAIRING, IMMEDIATELY AFTER YOU PRESS ENTER, YOU MAY HAVE A PROBLEM WITH YOUR ZAGGkeys PRO/PROplus. PLEASE CONTACT CUSTOMER SUPPORT AT ZAGG.COM TO RESOLVE THE PROBLEM.

NEED MORE HELP? PLEASE SEE OUR FAQ SECTION AT: www.ZAGG.com/faq


5. ON THE iPad®, SELECT:
SETTINGS > GENERAL > BLUETOOTH > ON.
6. IF YOU SEE ZAGGkeys PRO/PROplus LISTED AS AN “AVAILABLE DEVICE” ON YOUR iPad®, CLICK ON THE ARROW TO THE RIGHT AND CHOOSE TO HAVE YOUR iPad® “FORGET THE DEVICE.”
7. CLICK PAIR BUTTON ON ZAGGkeys PRO/PROplus AND WATCH FOR THE CAPS LOCK LIGHT TO FLASH.
8. YOU SHOULD SEE ZAGGkeys PRO/PROplus LISTED AS AN “AVAILABLE DEVICE.”
9. SELECT ZAGGkeys PRO/PROplus BY TOUCHING IT ON YOUR iPad®.
10. YOUR ZAGGkeys PRO/PROplus SHOULD NOW BE PAIRED.
11. IF YOUR iPad® GIVES YOU AN ERROR MESSAGE, REPEAT PROCESS AGAIN.
12. IF YOU STILL CAN'T GET YOUR ZAGGkeys PRO/PROplus TO PAIR, IT IS POSSIBLE YOUR iPad® NEEDS TO HAVE ITS SOFTWARE UPDATED.
- 13. IF BACKLIGHTING IS NOT OPERATING: BATTERY MAY NEED TO BE CHARGED AS BACKLIT KEYS WILL NOT OPERATE WHEN BATTERY LIFE FALLS BELOW 20%.**

TO CLOSE, LINE UP THE CUTOUT IN THE ZAGGkeys PRO/PROplus WITH THE 30-PIN CHARGER PORT ON iPad®, AND PLACE iPad® FACE DOWN ONTO THE PRO/PROplus. THE MAGNETS WILL ATTRACT AND SECURE iPad® TO THE ZAGGkeys PRO/PROplus. iPad® WILL AUTOMATICALLY SWITCH TO SLEEP MODE WHEN SECURED IN THE ZAGGkeys PRO/PROplus AND START UP WHEN THE DEVICES ARE SEPARATED. THIS FUNCTION CAN BE TOGGLED ON OR OFF IN THE SETTINGS MENU OF YOUR iPad®.

NOTE: THE ZAGGkeys PRO/PROplus AND iPad® MUST BE ALIGNED PROPERLY FOR THE MAGNET CLOSURE TO FUNCTION. IF THE ALIGNMENT IS NOT CORRECT, THE MAGNETS WILL NOT ATTRACT.

POSITIONING

SIMPLY PLACE iPad® EITHER VERTICALLY OR HORIZONTALLY INTO THE SLOT AND LEAN THE DEVICE BACK. WHEN IN LANDSCAPE ORIENTATION, MAGNETS IN THE PRO/PROPLUS CENTRAL GROOVE WILL HELP SECURE iPad®.

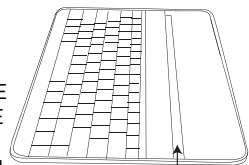

CENTRAL GROOVE

POWERING ON AND PAIRING YOUR ZAGGkeys PRO/PROplus

THE ZAGGkeys PRO/PROplus's BLUETOOTH KEYBOARD SHOULD ONLY NEED TO PAIR TO YOUR iPad® ONCE AS FOLLOWS:

1. ON THE ZAGGkeys PRO/PROplus, SLIDE THE POWER BUTTON ON. THE BLUE CAPS LOCK LIGHT WILL ILLUMINATE FOR FOUR SECONDS AND THEN TURN OFF TO SAVE POWER. YOUR ZAGGkeys PRO/PROplus IS STILL ON.
2. PRESS THE PAIR BUTTON AND THE CAPS LOCK LIGHT WILL FLASH INDICATING THAT YOUR PRO/PROplus IS READY TO PAIR.
3. ON THE iPad®, SELECT: SETTINGS > GENERAL > BLUETOOTH > ON.
4. THE CAPS LOCK LIGHT WILL FLASH ON THE PRO/PROplus AND THE iPad® WILL DISPLAY "ZAGGkeys PRO/PROplus" AS AN AVAILABLE DEVICE.
5. SELECT "ZAGGkeys PRO/PROplus" ON THE iPad®; TO PAIR.
6. YOUR iPad® AND PRO/PROplus WILL AUTOMATICALLY PAIR.

TROUBLESHOOTING

WHAT TO DO IF THE iPad® DOES NOT RESPOND TO THE ZAGGkeys PRO/PROplus.

A FEW THINGS CAN CAUSE THIS PROBLEM:

- DEAD BATTERY
- NEED TO PAIR THE ZAGGkeys PRO/PROplus TO YOUR iPad® AGAIN
- OLD iPad® SOFTWARE
- PROBLEM WITH ZAGGkeys PRO/PROplus

PLEASE FOLLOW THE LIST BELOW TO FIND THE PROBLEM AND APPROPRIATE SOLUTION.

1. RESTART YOUR iPad® BY HOLDING DOWN THE HOME AND POWER BUTTON SIMULTANEOUSLY UNTIL IT RESETS. LET GO OF THE BUTTONS WHEN YOU SEE THE APPLE® LOGO.
2. TURN OFF ZAGGkeys PRO/PROplus.
3. TURN THE ZAGGkeys PRO/PROplus ON. YOU SHOULD SEE THE CAPS LOCK LIGHT TURN ON FOR ABOUT 4 SECONDS AND THEN TURN OFF. IF NOT, CHARGE YOUR ZAGGkeys PRO/PROplus.
4. AFTER CHARGING, SLIDE THE POWER SWITCH ON. IF THE CAPS LOCK LIGHT DOES NOT ILLUMINATE FOR A FEW SECONDS AND GO DIM, YOU MAY HAVE A PROBLEM WITH YOUR ZAGGkeys PRO/PROplus. PLEASE CONTACT CUSTOMER SUPPORT AT ZAGG.COM TO RESOLVE THIS PROBLEM.

BACKLIGHT (ON ZAGGkeys PROplus)

TO CONSERVE BATTERY LIFE, THE BACKLIT KEYS WILL TURN OFF AFTER 60 SECONDS OF NON-TYPING. THEY WILL AUTOMATICALLY TURN ON AT THE PRESS OF ANY KEY. AFTER 30 MINUTES OF NON-TYPING THE BACK LIT KEYS WILL NEED TO BE TURNED BACK ON BY SIMPLY PRESSING THE BACKLIGHT KEY. PRESS THE BACKLIGHT KEY TO INCREASE BRIGHTNESS FROM LOW, MEDIUM AND HIGH AND THEN AGAIN TO TURN OFF.

TO CHANGE THE COLOUR OF THE BACKLIGHT, PRESS THE BACKLIGHT KEY AND THE RIGHT OR LEFT DIRECTION KEY AT THE SAME TIME. YOU CAN SELECT FROM: WHITE, RED, AMBER, GREEN, AQUA, BLUE, OR VIOLET.

BATTERY

ZAGGkeys PRO/PROplus's LONG-LIFE BATTERY LASTS FOR SEVERAL MONTHS OF NORMAL USE. THE ZAGGkeys PRO/PROplus WILL GO INTO SLEEP MODE IF LEFT ON AND NOT BEING USED; PRESS ANY KEY AND WAIT A SECOND OR TWO TO BRING IT OUT OF SLEEP MODE. THE LITHIUM-POLYMER BATTERY IN THE ZAGGkeys PRO/PROplus HAS NO MEMORY EFFECT AND MAY BE CHARGED WHENEVER YOU WISH. WHEN NOT IN USE FOR A PROLONGED PERIOD, IT IS RECOMMENDED THAT YOU TURN OFF THE KEYBOARD TO LENGTHEN BATTERY LIFE.

FOLD

CHARGING

YOUR ZAGGkeys PRO/PROplus COMES WITH A CHARGING CABLE THAT PLUGS INTO THE SIDE OF THE DEVICE. YOU CAN PLUG THE OTHER END OF THE CHARGING CABLE INTO ANY USB OUTLET, INCLUDING THE FOLLOWING: A COMPUTER, YOUR iPad® CHARGER, A ZAGGspark™, ETC. A COMPLETE CHARGE TAKES 2-4 HOURS.



SPECIAL FUNCTION KEYS

YOUR ZAGGkeys PRO/PROplus HAS BEEN DESIGNED WITH SPECIAL FUNCTION KEYS TO GIVE YOU MORE CONTROL OF YOUR iPad®.

- HOME BUTTON
-BRINGS YOU TO THE iPad® HOME SCREEN
- SEARCH
-BRINGS UP THE iPad® SEARCH SCREEN
- SLIDE-SHOW
-STARTS PLAYING SLIDE-SHOW OF SAVED PICTURES

**KEYBOARD HIDE/ SHOW**

-ALLOWS YOU TO HIDE OR SHOW iPad® ON SCREEN KEYBOARD

**LOCK**

-MAKES THE iPad® SCREEN GO DARK AND COME BACK ON WHEN PRESSED AGAIN

**PREVIOUS TRACK**

-SKIPS TO PREVIOUS TRACK ON CURRENT PLAYLIST

**PLAY/PAUSE**

-STARTS OR STOPS CURRENT PLAYLIST

**NEXT TRACK**

-SKIPS TO NEXT TRACK ON CURRENT PLAYLIST

**MUTE**

-MUTES AUDIO ON iPad®

**VOLUME DOWN**

-DECREASES VOLUME ON iPad®

**VOLUME UP**

-INCREASES VOLUME ON iPad®

LIGHTS AND BUTTONS

BATTERY LIGHT INDICATOR KEY: TURNS ON WHEN CHARGING, TURNS OFF WHEN FULLY CHARGED. WHEN PRESSED, LIGHT ON KEY WILL BLINK GREEN WHEN BATTERY IS CHARGED APPROXIMATELY 50-100%, BLINK YELLOW WHEN 20-50%, AND BLINK RED WHEN LESS THAN 20%. (THIS SHOULD GIVE YOU ABOUT 2 WEEKS OF NORMAL USE)

CAPS LOCK STATUS LIGHT (BLUE):

1. LIGHT STAYS ON WHEN CAPS LOCK IS ACTIVE
2. FLASHES WHEN PAIRING
3. LIGHTS BRIEFLY WHEN YOU TURN ON ZAGGkeys PRO/PROplus THEN TURNS OFF TO SAVE BATTERY

BACKLIGHT KEY (ON SELECT MODELS): WHEN PRESSED, BACKLIGHT ON KEYS WILL TOGGLE FROM LOW, TO MEDIUM, TO HIGH, AND THEN OFF. NOTE: WHEN BATTERY LIFE IS LESS THAN 20%, BACKLIT KEYS ARE AUTOMATICALLY SWITCHED OFF TO CONSERVE BATTERY LEVEL. EVEN THOUGH YOU WILL NOT BE ABLE TO USE YOUR BACKLIGHTS, THE KEYBOARD WILL HAVE ENOUGH POWER TO OPERATE FOR ABOUT 2 WEEKS.